

## PIL -04NS

The PIL-04NS remote control features four LEDs and four touch fields


- ✓ ▲ “UP”
- ✓ -- “STOP”
- ✓ ▼ “DOWN”
- ✓ = “CHANGE CHANNEL”

### Activating the roller shutter/roller blind

Press and release “CHANGE CHANNEL” to activate and move the motor, and press and release ▲ (OPEN) or ▼ (CLOSE). The motor can be stopped anytime.

**Roller blind mode:** press and hold “STOP” and press and release ▲ or ▼.

The remote control is in sleep mode by default, press ▲, ▼, “STOP”, “CHANGE CHANNEL” to activate the remote control (indicated by channel LED and buzzer).

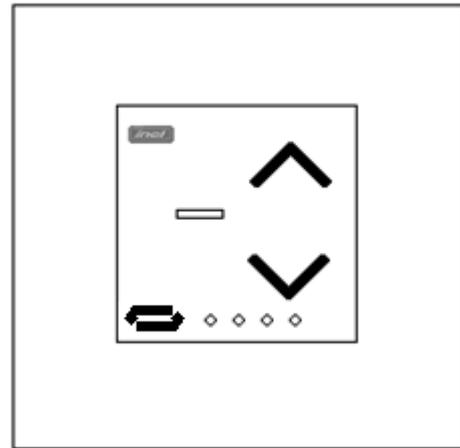

### Registering the remote controls

The channels can be controlled via the PIL-04NS remote control previously registered for this channel to a specific motor or controller.

#### Access to the programming mode:

1. Each time the motor or ST-01RL controller are connected to the mains, the devices remain in the programming mode for 10 seconds (first remote control).

#### Procedure:

Connect 230 VAC power supply to the motor/controller. Within 10 seconds:

- press “UP” ▲ and “DOWN” ▼ on the remote control simultaneously and release “UP” ▲ and then “DOWN”, all LEDs will lit.

The motor will move the roller shutter up and down. Press ▲ within the next 10 seconds to register the selected channel.

Short up and down movement will verify the correct registration.

**All previously registered channels will be deleted from the memory.**

2. The programming mode can also be accessed on ST-01R/ST-01RL controller or motor with a previously registered remote control.

The other channels of the same or different remote control are registered without switching the power supply off. Enter the programming mode using a registered remote control.

Press “UP” ▲ and “DOWN” ▼ simultaneously and release “UP” ▲ and then “DOWN” ▼.

The roller shutter will move up and down in a series of short movements, corresponding to the number of channels programmed.

The motor/controller remains in the programming mode for 10 seconds. To register a new channel for the same or different remote control, press ▲ for the channel to be added.

3. Press S1 programming key on ST-01R controller and press ▲ on the remote control.